

# PhotoSave Start Up Guide

- 1.** Insert the PhotoSave DVD disc into your PC's DVD Writer.
- 2.** The PhotoSave "Welcome!" screen will appear automatically.
  - A.** If the AutoPlay window appears first (Windows Vista users),
    - 1.** check "Always do this for software and games", then
    - 2.** click "Verbatim PhotoSave" under "Install or Run Program".
  - B.** If the welcome screen does not appear within 60 seconds, see Troubleshooting.
- 3.**
  - A.** For automatic photo searching/saving, choose "Auto Mode" and your file directory source (My Pictures, C:, etc.). Click "Record". After recording, the disc will be "closed" for archiving/viewing.
  - B.** To search/save from Camera/Memory Card or to manually select pictures/folders to save, choose the appropriate mode and click "Next". Use the simple wizard to add photos and click "Record". You have the option to leave the disc "open" so that more photos can be added later.
- 4.** When recording is complete, your disc will automatically eject from the drive. Click "Finish" and you are done!

